

1

ATTENZIONE: Prima di intervenire nel SEQUENZIATORE, staccate il cavo di alimentazione e tutti i connettori.


2

Rimuovere le viti indicate e rimuovere il coperchio.





3

Togliere la memoria vecchia facendo leva con l'apposita leva presente nella confezione della nuova memoria. Agire alternativamente dai due lati fino a rimuovere completamente il chip.

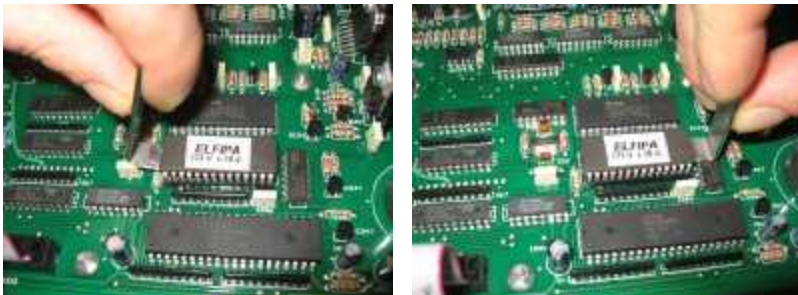

4

Prima di inserire il nuovo chip controllare che tutti i piedini siano perfettamente dritti. Infilare il nuovo chip nello zoccolo facendo molta attenzione alla tacca di riferimento. premere sopra il chip per farlo entrare completamente nello zoccolo. Verificare che tutti i piedini siano infilati correttamente.

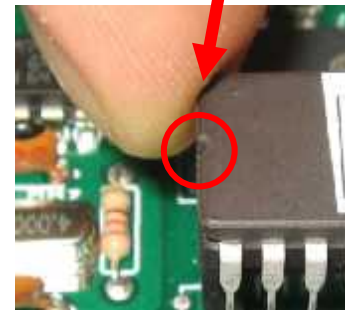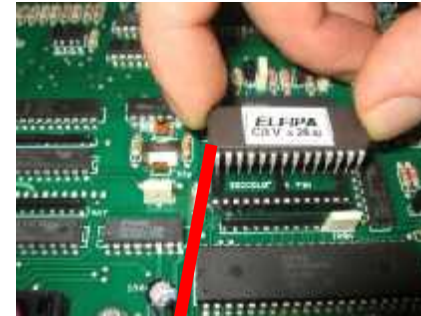

5

Rimettere il coperchio e le viti.

6

Accendere il Sequenziatore ed effettuare il RESET (tasti START e STOP premuti assieme).

1

WARNING: Before working on this SEQUENCER, disconnect feeding-cable and all the connectors.


2

Remove the screw marked and remove the cover.




3

Remove the old chip by levering with the appropriate lever included in the package of the new chip. Operate alternately on both sides to completely remove the chip.

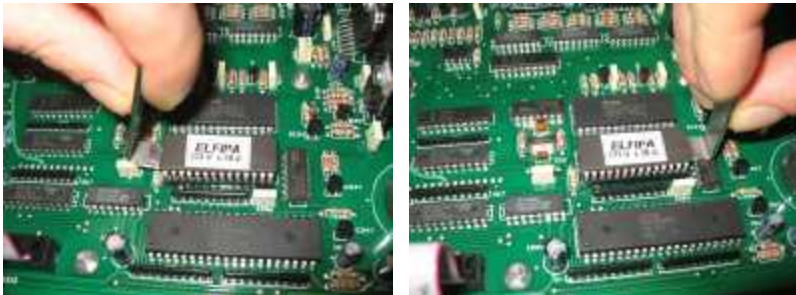

4

Before inserting the new chip, check that all the pins are perfectly straight. Insert the new chip into the socket, making sure the reference notch. Press on the chip to make it fit completely into the socket. Make sure all the pins are inserted correctly.

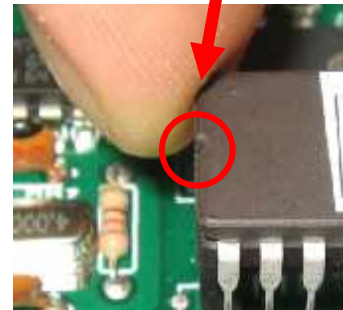

5

Replace the cover and screws.

6

Turn on the Sequencer and make a RESET (START and STOP keys pressed together).